


# DIY | Water Heater | R-4.5

## Reflectix® Installation Instructions

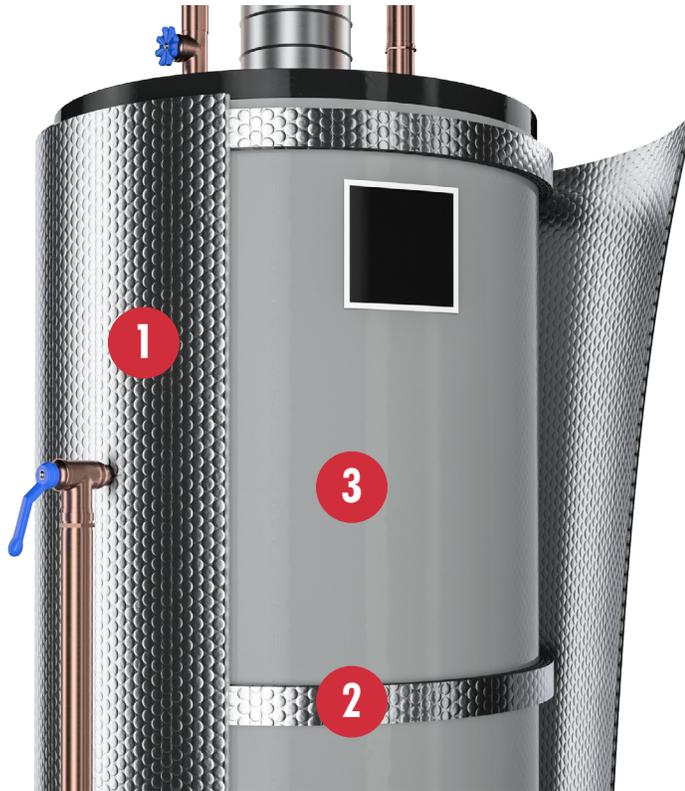

1. Reflectix® Insulation
2. Reflectix® Insulation  
Spacer Strips
3. Water Heater

### Tools Required:

Safety Glasses  
Tape Measure  
Utility Knife/Scissors

### Additional Materials:

Reflectix® Foil Tape

### Recommended Products:

- Reflective/Bubble/Bubble/Reflective - Roll: BP48025 (48" x 25')

### Installation Instructions:

- Cut three 2" wide strips of the Reflectix® Reflective/Bubble/Bubble/Reflective product at twice the circumference of the water heater (to be utilized as spacers).
  - Attach the three strips (doubled) with Reflectix® Foil Tape around the circumference of the water heater (top, bottom and middle).
  - Cut the Reflectix® at a width equal to the height of the water heater. Secondly, cut the length of the product equal to the circumference measured on the outside of the spacers plus 1".
  - If the water heater is taller than 48", a section of product will need to be fashioned to make up the shortage. The seam between the 48" sheet and the "extension" piece will need to be taped with Reflectix® Foil Tape on both sides.
  - Wrap the Reflectix® around the water heater and tape the vertical seam with Reflectix® Foil Tape.
  - Trim product around pressure valve and cut on both sides of thermostat housing to create a flap type cover for easy access. Additionally, cut product away from the cover of the lower access panel.
  - Note: Electric Water Heaters Only - Cut a circular section of the product the size of the top of the water heater - trim to accommodate wires, pipes and relief valve. Tape (foil) the circular product section to the top of the water heater.
- DO NOT USE PRODUCT ON TOP OF GAS WATER HEATERS.**

- **Note:** Electric Water Heaters - Check to insure heater is wired to meet local codes.
- **Note:** Gas Water Heaters - Do not install the insulation below the bottom of the water heater tank - This area is to allow combustion air.
- **Note:** All Water Heaters - Refer to owners or operating manual and follow any instructions provided for insulating the unit.

#### Review These Important Safety Guidelines Prior to Installation:

- **ALWAYS** check local building codes before installing Reflectix®.
- **ALWAYS** check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing Reflectix®.
- **ALWAYS** make sure work areas are well ventilated and well lighted.
- **ALWAYS** use eye protection when operating a staple gun.
- **ALWAYS** use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. **NEVER** staple into electrical wiring.
- **ALWAYS** be careful when working with large pieces of Reflectix® on windy days.
- When installing Reflectix® on bright sunny days, it is best to wear sunglasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at [www.reflectixinc.com](http://www.reflectixinc.com) for additional product and installation information.

**Please Note:** The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the Reflectix® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the Reflectix® products as a guideline. There are no claims on the part of Reflectix, Inc. that these building assemblies are finite standards or meet building code requirements (as they can vary by region).



#### REFLECTIVE PRODUCTS

A Division of Balcan Innovations, Inc.

#1 School St. (POB 108) Markleville, IN 46056

(800) 879-3645

E: [customerservice@reflectixinc.com](mailto:customerservice@reflectixinc.com)

[www.reflectixinc.com](http://www.reflectixinc.com)

Revised 022025