


PF Bldg | Roof | Retro | Bottom of Trusses

Reflectix Installation Instructions

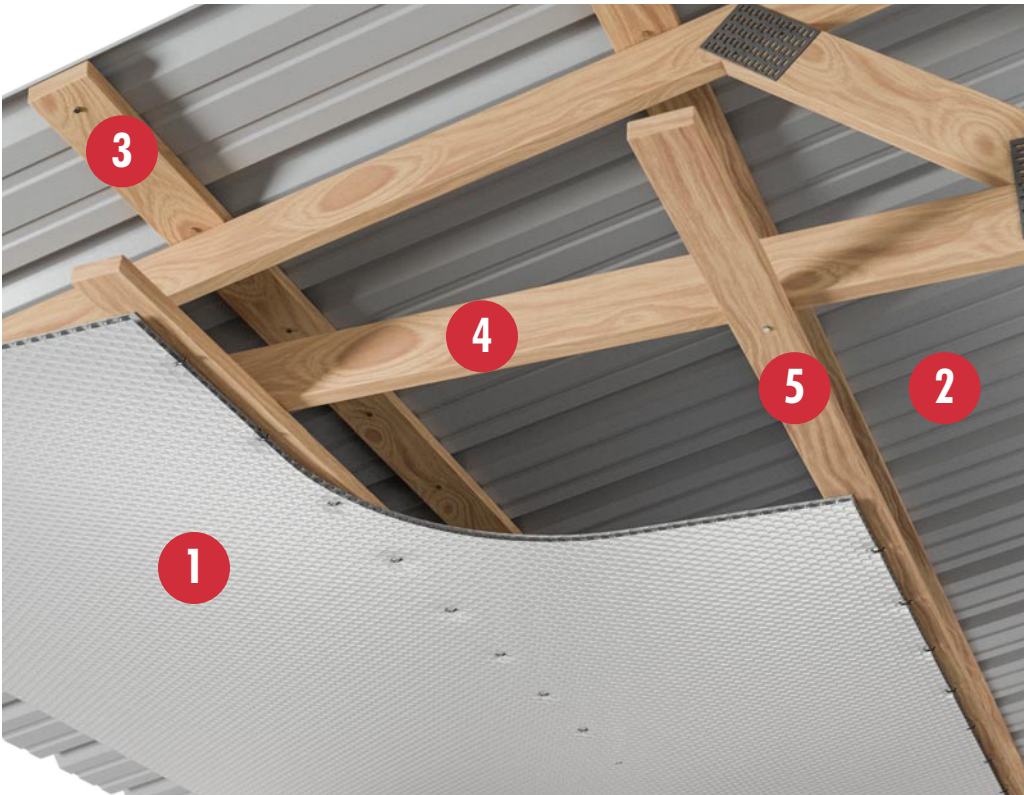

1. Reflectix® Insulation
2. Exterior Roof Panel
3. Purlin
4. Truss
5. 1" x 2" (Nominal) Furring Strip

Tools Required:
Safety Glasses
Tape Measure
Utility Knife
Staple Gun

Recommended Product:

- Reflective/Bubble/Bubble/White - Roll: RDBW48100 (48" x 100')

Bottom of the Trusses

Open Interior

R-6.6* Heat Flow Down | R-3.0* Heat Flow Up

Installation Instructions:

- The Reflectix® Insulation is installed with the "white side" towards the interior of the building.
- Pre-installation inspection - Check the roof area for clutter, water sprinklers, conduit and lights. Sprinkler systems are especially important. All water pipes must be below the Reflectix® Reflective/Bubble/Bubble/White Insulation to prevent the possibility of freezing in the winter.
- Nail 1" x 2" furring strips on the bottom of and perpendicular to the trusses on 22" centers. (Note: When truss spacing is 24" it is recommended to install the Reflectix® Reflective/Bubble/Bubble/White 48" product directly to the bottom cord of the truss.)
- Butt the furring strips together and tape. Staple tape for reinforcement.
- Staple the edges of the Reflectix® to the furring strip with 5/16" staples at approximately 4" intervals. Run subsequent courses of the product with a 3/4" overlap at the seams.
- Tape the seams with a Reflectix® White Poly Tape (goal is an air-tight, snug seam seal).

- Tape any butt seams with Reflectix® White Poly Tape, insure taped seam has a good full continuous bond.
- Staple product down the middle of the sheet into the furring strip above.

* Includes thermal resistance of 0.61 UP and 0.92 DOWN for interior air film.

Calculation Disclaimer: All values are calculated based on the "ASHRAE Handbook of Fundamentals" heat flow up and down.

Review These Important Safety Guidelines Prior to Installation:

- **ALWAYS** check local building codes before installing Reflectix®.
- **ALWAYS** check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing Reflectix®.
- **ALWAYS** make sure work areas are well ventilated and well lighted.
- **ALWAYS** use eye protection when operating a staple gun.
- **ALWAYS** use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. **NEVER** staple into electrical wiring.
- **ALWAYS** be careful when working with large pieces of Reflectix® on windy days.
- When installing Reflectix® on bright sunny days, it is best to wear sun glasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at www.reflectixinc.com for additional product and installation information.

Please Note: The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the Reflectix® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the Reflectix® products as a guideline. There are no claims on the part of Reflectix, Inc. that these building assemblies are finite standards or meet building code requirements (as they can vary by region).

Reflectix, Inc.

#1 School Street (P.O. Box 108)

Markleville, IN 46056

Ph: (800) 879-3645 (US/Can)

(765) 533-4332

Fax: (765) 533-2327

Email: customerservice@reflectixinc.com

Web: www.reflectixinc.com

www.youtube.com/ReflectixInsulation

www.facebook.com/ReflectixInsulation

www.linkedin.com

www.pinterest.com/reflectixinc

Revised 012021