
Metal Building / Roof / New

Reflectix[®] Installation Instructions

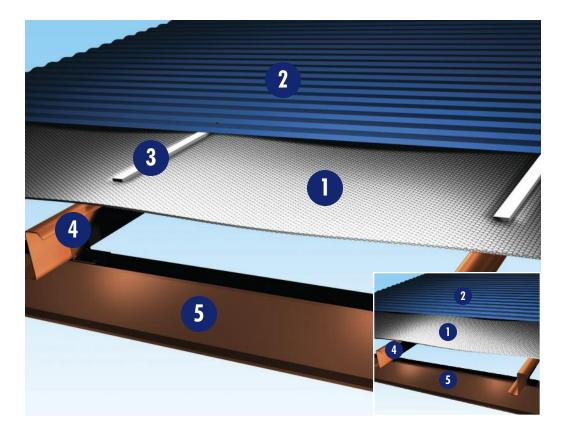

- 1. Reflectix[®] Insulation
- 2. Exterior Roof Panel
- 3. 3/4" Thermal Break
- 4. Purlin
- 5. Red Metal (Structural Frame)

Tools Required:

Safety Glasses Tape Measure Utility Knife Screw Gun

Recommended Products: Reflective/Bubble/Bubble/Reflective - Roll: BP48100 (48"x 100')

Open Interior with 3/4" Thermal Breaks R-10* Heat Flow Down (and a Radiant Barrier) R-4.5* Heat Flow Up

Open Interior without Thermal Breaks and a Nominal 3/4" Drape R-7.6* Heat Flow Down (and a Radiant Barrier) R-3.9* Heat Flow Up

<u>Please Note</u>: In addition to the stated R-value, this application also provides a Radiant Barrier. As a result, a 96% reduction of the radiant energy that ordinarily would be transmitted to the interior of the building is blocked.

Installation Instructions: (There are 2 options)

1. Open Interior with 3/4" Thermal Breaks

• After the red metal is erected, install the Reflectix[®] Reflective/Bubble/Bubble/Reflective product over the purlins by using 1/2" self-tapping metal screws and screwing the product to the purlins.

- Tape the seams with a Reflectix[®] Foil Tape (goal is an air-tight, snug seam seal).
- Install at least a 3/4" thermal break. If installing a standing seam roof, use clips with thermal breaks.
- Install roofing either by screwing corrugated metal screws through the thermal break and insulation to the purlin or install a standing seam roof.
- If an interior finish is to be installed, attach to the bottom of the purlins.
- This will create a 3/4" air space between the roofing and the insulation and an 8" air space between the insulation and the interior finish.

2. Open Interior without Thermal Breaks and a Nominal 3/4" Drape

- Per instructions above without the thermal break.
- * Includes thermal resistance of 1.32 UP and 4.55 DOWN for interior air film.

Calculation Disclaimer: All values are calculated based on the "ASHRAE Handbook of Fundamentals" heat flow up and down.

Review These Important Safety Guidelines Prior to Installation:

- ALWAYS check local building codes before installing Reflectix*.
- ALWAYS check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing Reflectix*.
- ALWAYS make sure work areas are well ventilated and well lighted.
- <u>ALWAYS</u> use eye protection when operating a staple gun.
- <u>ALWAYS</u> use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. <u>NEVER</u> staple into electrical wiring.
- ALWAYS be careful when working with large pieces of Reflectix® on windy days.
- When installing Reflectix® on bright sunny days, it is best to wear sun glasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at www.reflectixinc.com for additional product and installation information.

Please Note:

The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the Reflectix[®] products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the Reflectix[®] products as a guideline. There are no claims on the part of Reflectix, Inc. that these building assemblies are finite standards or meet building code requirements (as they can vary by region).

Reflectix, Inc.

#1 School Street (P.O. Box 108)
Markleville, IN 46056
Ph: (800) 879-3645 (US/Can)
(765) 533-4332
Fax: (765) 533-2327
Email: customerservice @ reflectixinc.com
Web: www.reflectixinc.com
"Like Us" @: www.facebook.com/ReflectixInsulation
www.youtube.com/ReflectixInsulation
www.pinterest.com/reflectixinc

* MADE IN THE * USA WITH DOMESTIC AND IMPORTED COMPONENTS

Revised 0517