


Metal Building | Roof | New

Reflectix® Installation Instructions

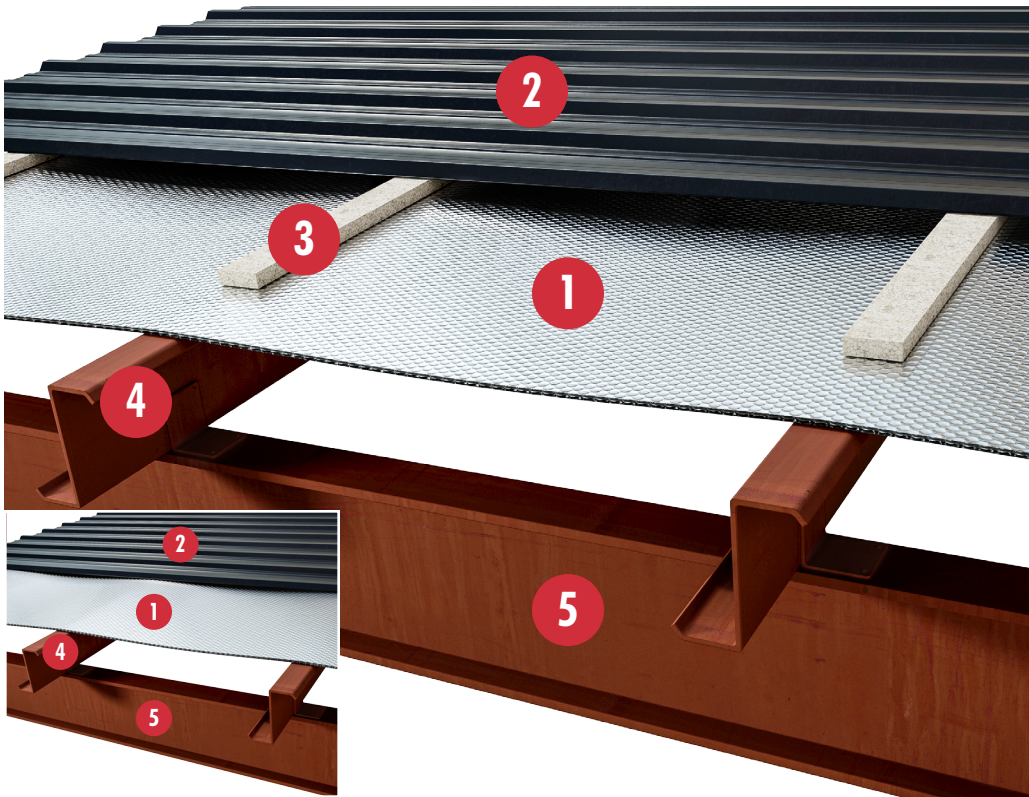

1. Reflectix® Insulation
2. Exterior Roof Panel
3. 3/4" Thermal Break
4. Purlin
5. Red Metal (Structural Frame)

Tools Required:
Safety Glasses
Tape Measure
Utility Knife
Screw Gun

Recommended Products:

- Reflective/Bubble/Bubble/Reflective - Roll: BP48100 (48" x 100')

Open Interior with 3/4" Thermal Breaks

R-10* Heat Flow Down (and a Radiant Barrier)

R-4.5* Heat Flow Up

Open Interior without Thermal Breaks and a Nominal 3/4" Drap

R-7.6* Heat Flow Down (and a Radiant Barrier)

R-3.9* Heat Flow Up

Please Note: In addition to the stated R-values, these applications also provide a Radiant Barrier. As a result, a 96% reduction of the radiant energy that ordinarily would be transmitted to the interior of the building, is blocked.

Installation Instructions: (There are 2 options)

1. Open Interior with 3/4" Thermal Breaks

- After the red metal is erected, install the Reflectix® Reflective/Bubble/Bubble/Reflective product over the purlins by using 1/2" self-tapping metal screws and screwing the product to the purlins.
- Tape the seams with a Reflectix® Foil Tape (goal is an air-tight, snug seam seal).
- Install at least a 3/4" thermal break. If installing a standing seam roof, use clips with thermal breaks.

- Install roofing either by screwing corrugated metal screws through the thermal break and insulation to the purlin or install a standing seam roof.
- If an interior finish is to be installed, attach to the bottom of the purlins.
- This will create a 3/4" air space between the roofing and the insulation and an 8" air space between the insulation and the interior finish.

2. Open Interior without Thermal Breaks and a Nominal 3/4" Drap

- Per instructions above without the thermal break.

* Includes thermal resistance of 1.32 UP and 4.55 DOWN for interior air film.

Calculation Disclaimer: All values are calculated based on the "ASHRAE Handbook of Fundamentals" heat flow up and down.

Review These Important Safety Guidelines Prior to Installation:

- **ALWAYS** check local building codes before installing Reflectix®.
- **ALWAYS** check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing Reflectix®.
- **ALWAYS** make sure work areas are well ventilated and well lighted.
- **ALWAYS** use eye protection when operating a staple gun.
- **ALWAYS** use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. **NEVER** staple into electrical wiring.
- **ALWAYS** be careful when working with large pieces of Reflectix® on windy days.
- When installing Reflectix® on bright sunny days, it is best to wear sunglasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at www.reflectixinc.com for additional product and installation information.

Please Note: The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the Reflectix® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the Reflectix® products as a guideline. There are no claims on the part of Reflectix, Inc. that these building assemblies are finite standards or meet building code requirements (as they can vary by region).



REFLECTIVE PRODUCTS

A Division of Balcan Innovations, Inc.

#1 School St. (POB 108) Markleville, IN 46056

(800) 879-3645

E: customerservice@reflectixinc.com

www.reflectixinc.com

Revised 022025